

INS-116X-12

Safety Light Operating Instructions Models NSP-1162 / 1164 / 1166 / 1168 / 1170 / 1172 / 1174 / 1176 / 1178 / 1180 / 1182

CAUTION: DO NOT use in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required

DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the hand-lamp

CAUTION: For Light Duty Use Only

WARNING: NOT FOR USE ABOVE HAZARDOUS LOCATIONS

Thank you for purchasing this Nightstick flashlight. **Save these instructions.** Please read these instructions before using your flashlight.



ALL MODELS

INSTALLING OR REPLACING BATTERIES

- 1. Remove the battery cover on the lower back of the light
- Install the 4 AA alkaline batteries and align the battery + / with the light housing. For best performance and run-time always use premium quality AA alkaline batteries.
- Replace the battery cover.

BATTERY NOTES

- · Batteries may lose power when stored for long periods.
- Alkaline batteries can leak and cause corrosion if stored for long periods. Always remove batteries if the light will be unused for extended periods.
- Batteries should be stored between 68-78°F (20-25°C)

ATTACHING THE LANYARD RING

The lanyard ring is made of pliable material. Loop a suitable lanyard through the rectangular lanyard attachment hole. Slide the flashlight into the ring. The ring will conform to the light body and hold the light.

REMOVABLE MAGNETIC CLIP

Snap the magnetic clip onto the light body. Attach to any steel surface. The light can rotate inside the clip.

SAFETY

CAUTION BRIGHT LED RADIATION: AVOID DIRECT EYE EXPOSURE. The light is a Class 2 LED product per IEC 60825-1 Edition 1.2.2001.

Do not use this FLASHLIGHT in explosive or hazardous areas.

OPERATING THE LIGHT


All models have two body switches that control the flashlight and the safety light. The flashlight and safety light functions can be operated independently and tenather.

Models 1162 / 1164 / 1166 / 1168

Safety Light

1162-red, 1164 -blue, 1166-white, 1168-amber

- The upper switch controls the flashlight. Lightly press the switch for momentary flashlight operation. For constant on, press the switch until it clicks. Press again for off
- The lower switch controls the safety light. Press for full power.
- Press again for half-power. Press again to activate flashing safety light. Press again for off.

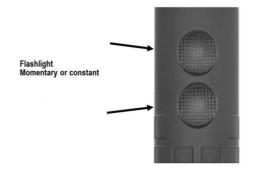

Models 1170 / 1172 / 1176 / 1178 /1180 /1182

Safety Light

1170-blue/red, 1172-white/red, 1176-white/amber, 1178-white/blue, 1180-amber/green, 1182-blue/green

- The upper switch controls the flashlight. Lightly press the switch for momentary flashlight operation. For constant on, press the switch until it clicks. Press again for off
- The lower switch controls the safety light. Press for constant (non-flashing) safety light. Press again to activate alternating flasher. Press again for off.

Model 1174

Safety Light

1174-amber

- The upper switch controls the flashlight. Lightly press the switch for momentary flashlight operation. For constant on, press the switch until it clicks. Press again for off.
- The lower switch controls the flood /safety light. Press for floodlight. Press again to activate flashing amber light. Press again for off.

WARRANTY

Limited Lifetime Warranty

Product is warranted to be free from defects in workmanship and materials for the lifetime of the original owner. Includes the housing, lenses, electronics and switches. Batteries, normal wear and abuse are excluded.

Not Covered

Consequential damages, incidental damages or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, which may vary from state to state.

Warranty Claims - USA

Contact Bayco for USA warranty claims. Call 800-233-2155 or email cs@baycoproducts.com and Bayco Customer Service will provide a Return Goods Authorization (RGA) to facilitate rapid warranty action. After receiving the RGA, send the product (shipping prepaid) to BAYCO • 640 S. SANDEN BLVD • WYLIE, TEXAS • 75098. Include a dated proof of purchase and a brief description of the defect with your name, address and phone number. Your product will either be repaired or replaced at the option of Bayco and returned as soon as practical, but no later than 45 days after being received by Bayco.

Warranty questions and international claims

If you live outside the USA or have questions about this warranty or an inquiry about other Bayco products contact BAYCO • 640 S. SANDEN BLVD • WYLIE, TEXAS • 75098 or call 800-233-2155

